




USER GUIDE

Deck Claw

INNOVATIVE SOLUTION

Deck Claw is an **innovative concealed decking fastening system** designed to revolutionise the way decks are built. Engineered for strength and simplicity, it securely locks deck boards in place without the need for visible screws or nails, preserving the natural beauty of your decking surface.

Whether you're a professional builder or a DIY enthusiast, Deck Claw offers a **seamless, durable, and aesthetically superior solution** that ensures a flawless finish every time.

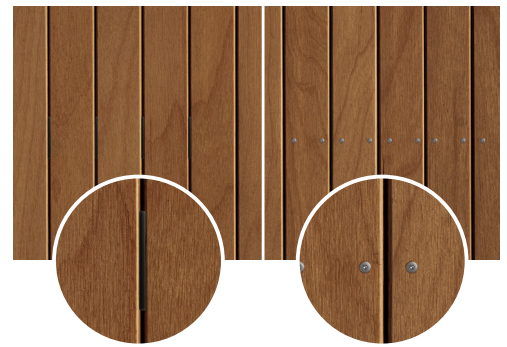

Deck Claw

Normal Decking Screws

BENEFITS

Flawless Finish

Deck Claw ensures a smooth, uninterrupted surface by eliminating visible screws and nails, giving your deck a clean, high-end look.



Easy Installation

Designed for simplicity, Deck Claw enables quick and secure fastening without complicated steps.



Invisible Fastening

Hidden beneath the boards, Deck Claw keeps fasteners out of sight, preserving the natural charm of your decking material.



Priceless Results

With enhanced durability, aesthetic appeal, and long-term value, Deck Claw delivers a professional deck that stands the test of time.



Disclaimer: while every reasonable effort has been made to ensure that this document is correct at the time of printing, Hobson Engineering®, its agencies and employees disclaim all liability in respect to anything or the consequences of anything done or omitted regarding the whole or any part of this document. HEC product marking is the manufacturing mark of Hobson Engineering. HEC is a registered trademark of Hobson Engineering.

Bolt Tension | Anti-Vibration | Product Reliability | Traceability

hobson.com.au **QUALITY FASTENERS SINCE 1935**





USER GUIDE

Deck Claw

INSTALLATION

INSTRUCTIONS

Preparation

- Grab the T10 driver bit 
- Lay out ratchet straps
- Apply joist tape to all joists

First Board Setup

- Secure the first board with adhesive and aluminium angles
- If required, use temporary G clamps for additional strength
- Once the first board is straight and secure, install the next selection of boards (seven is recommended)
- If the boards are badly bent, reduce the number in the clamp ups

Installation

- Apply beads of adhesive to the bottom of each board
- Insert Deck Claws between each row of boards as you lay

After Seven Boards

Option A:

- Keep laying more boards, repeat steps

Option B:

- Start screwing down visible screws
- Use T10 driver bit
- Start at one end and work across
- Press down firmly without overdriving

Pro Tips

- Pull boards tight—no gaps
- Step evenly on boards
- Tighten straps slowly without twisting

HANDY HINTS

Straps & Clamps:

Use ratchet straps as wide as your deck. Deck or pipe cramps also work.

Adhesive:

Use SIKAFlex 11FC black (or similar) to bond boards.

Board Placement:

Use a straight board at the end of each section to hold Deck Claws in place.

Clamping:

Apply enough pressure to keep Deck Claws secure before screwing.

Drilling:

Use a slow-speed drill, not an impact driver.

Screws:


Designed for KD pine. Test first for hardwood. Pre-drill if joists are too hard.

Optional Coating:



Some builders precoat boards. If doing so, make sure the backs are dry before gluing.

Joist Tape:

Apply adhesive deck tape on top of all joists.

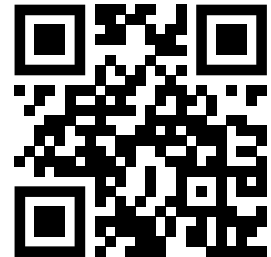

FIND FAQ, VIDEO & INSTALLATION INSTRUCTIONS

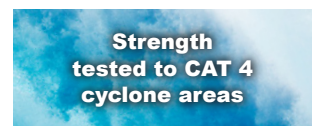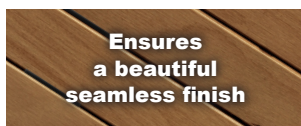

Disclaimer: while every reasonable effort has been made to ensure that this document is correct at the time of printing, Hobson Engineering®, its agencies and employees disclaim all liability in respect to anything or the consequences of anything done or omitted regarding the whole or any part of this document. HEC product marking is the manufacturing mark of Hobson Engineering. HEC is a registered trademark of Hobson Engineering.

Bolt Tension | Anti-Vibration | Product Reliability | Traceability

hobson.com.au **QUALITY FASTENERS SINCE 1935**

